



INSTRUCTION of MBG20/MBG23/MBG45/MBG62

Important Remarks

- For the purpose of security, please change the codes prior to use
- Please keep codes in a safe place. Do not use personal data like birthdays, telephone numbers ...
- Please keep key in a safe place but not in the safe itself!
- Personal codes can be used as guest-codes in hotel
- If the safe will not be used for a long time, please take out batteries

To Lock the Safe

Hotel version:

Close the door and hold it. Enter existing or a new personal code (3-6 digits), press "#" key. The door will lock automatically.

Private version:

Close the door and hold it. press "#" key. The door will lock automatically.

Change version:

In open position (that is, the bolts are retracted), input "**99#".

If display shows "PERSON", it means safe is in private version now.

If display shows "HOTEL", it means safe is in hotel version now.

Caution: If there is a barrier blocking the door, the display will show "ERROR2" and the bolts draw back automatically.

Remove the barrier and try it again.

In case of wrong entry digit, you can delete it by pressing "***".

To Open the Safe With Personal code

Enter the **personal code**. The door will open automatically.

Caution:

- Display will show "ERROR" when wrong code inputs.
- Four wrong code inputs consecutively puts the safe in secure mode for 3 minutes. Display will show "HOLD03" when press any key (after 02 and then 01). When the 3 minutes are passed, the electronic is ready again for use.
- To replace the code with "-", please press key "***" before operation. But the code will not be showed by "-" next operation.

To set Personal Code

To change personal code in private version, lock must be opened(that is, the bolts are retracted). Enter "***" display will show "PROG", re-enter "68#", it will show "NEW". Enter new code(3-6 digits), then press "#", the display will show "AGAIN", re-enter the new code and press "#", the display will show "DONE" indicates new personal code changed successfully.

To change personal code in hotel version, input new personal code and press "#" to lock the door, the personal code changed automatically.



To Open the Safe With Master Code

Enter the master code (pre-selected 0-0-0-0-0-0). The door will open automatically.

To set Master Code

To change master code, lock must be opened(that is, the bolts are retracted). Press key "0" twice, then press "#", the display shows "OLD", enter old code (pre-selected 0-0-0-0-0-0). Then press "#" to show "NEW", enter new 6 digit codes. Then press "#", the display will show "AGAIN", re-enter the new code and press "#", the display will show "DONE" indicates new master code changed successfully.

Caution: For the purpose of security, please change the master code at the first time before use especially in Hotel.

To Open the Safe With Emergency Key

Take off the cover of emergency key in the panel, insert the emergency key and turn clockwise 90° , display will show "nAnUAL". Open the door and turn the key anticlockwise 90°, press "#" key and the bolts will be automatically retracted.

TO CHECK 100 LAST TIME OPENING/CLOSING RECORD

To check the 100 last time opening/locking record, lock must be opened (that is, the bolts are retracted). Press key "*" twice, the display shows "PROG", input "060516", then press "#", the display will show:

0	0	6	0	0	1
1st			2nd	3rd	

1st : the No. of record;

2nd : the action of door;

"O" means opening record;

"C" means locking record;

3rd : means different opening method

"01" means - by user's code;

"02" means - by master code;

"09" means - by mechanical key.

TO Replace Batteries

If the voltage of batteries is deficient, the display will show " BA-LO" and batteries have to be replaced. Please look at the environmental standards.

Installation

The product must be mounted by securing either the back or the bottom of the safe. You may select the expansion bolt when it is a concrete wall surface or select clamping bolt when it is a wooden wall surface.